



# 1 Ground Connections

## 1.1 Overview of Ground Connections in engine compartment

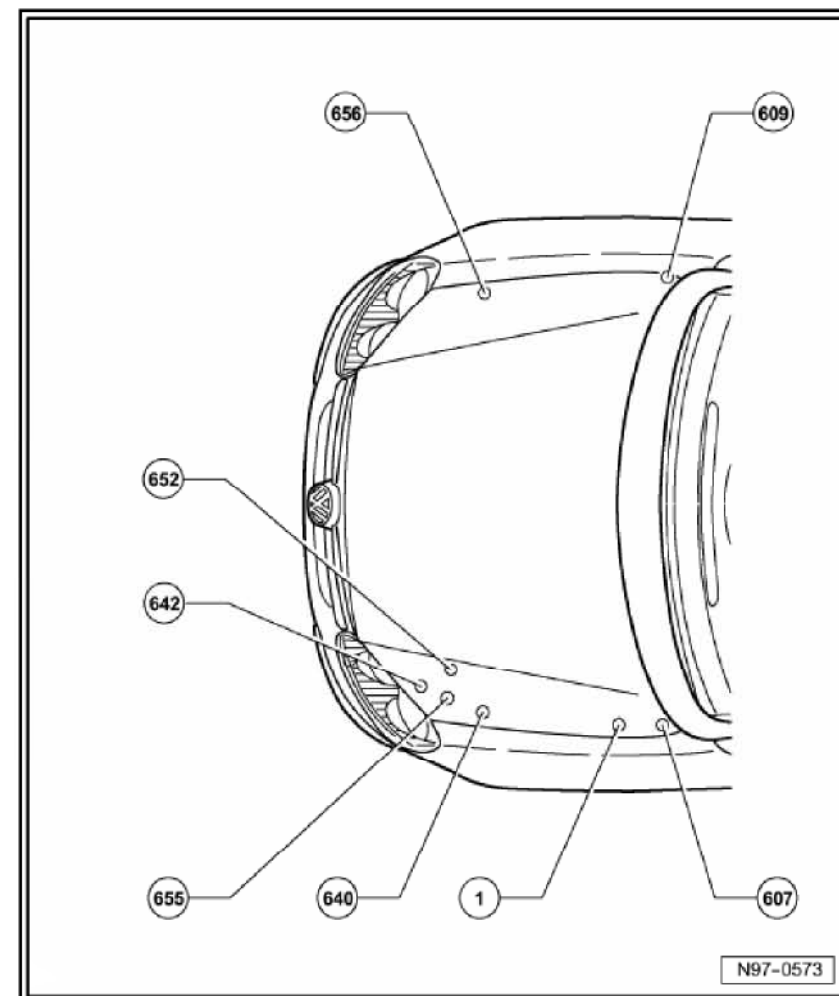


1 - Ground strap, battery to body ⇒ -Arrow A-


12 - Ground Connection in engine compartment, left ⇒ -Arrow B-

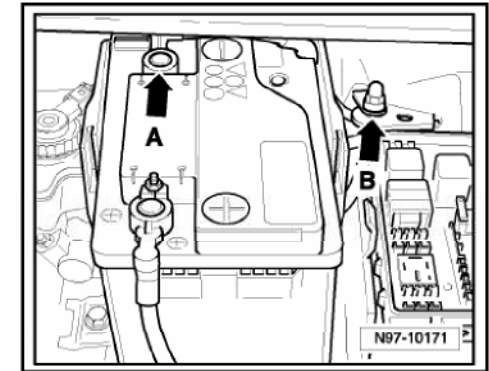


656 - Ground Connection (on right headlamp) ⇒ -Arrow-

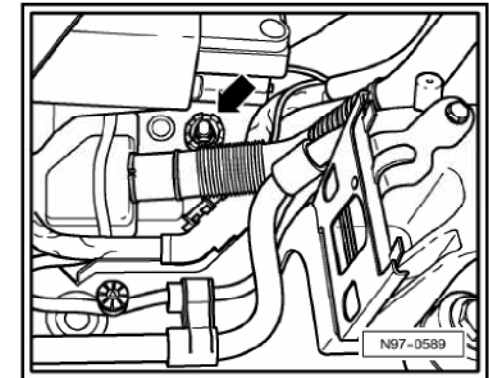

607 - Ground Connection (in plenum chamber, left) ⇒ -Arrow-

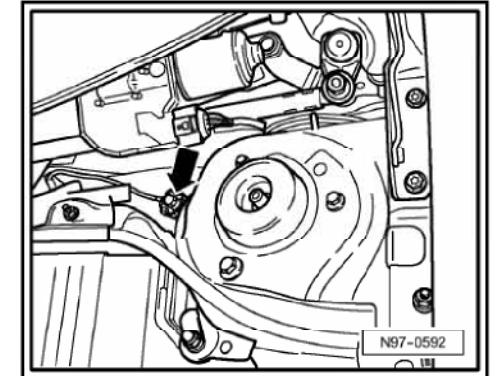

609 - Ground Connection (in plenum chamber, right), (Not used from model year 2007) ⇒ -Arrow-


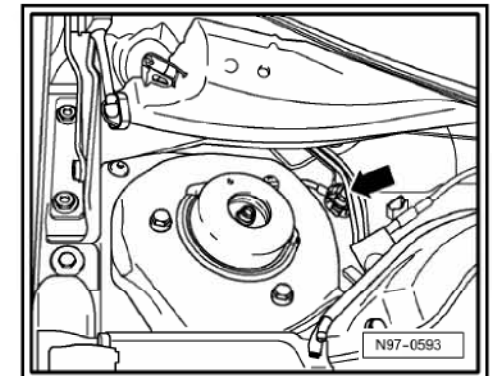


640 - Ground Connection (in engine compartment, left) ⇒ -Arrow A-


642 - Ground Connection (on electronic fan control) ⇒ -Arrow C-

652 - Transmission/Engine Ground Connection (used from model year 2007 additional with Electro-mechanical Power Steering) ⇒ -Arrow D-

655 - Ground Connection (on left headlamp), (Not used from model year 2007) ⇒ -Arrow B-

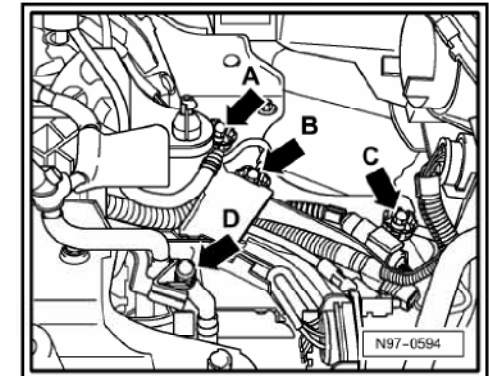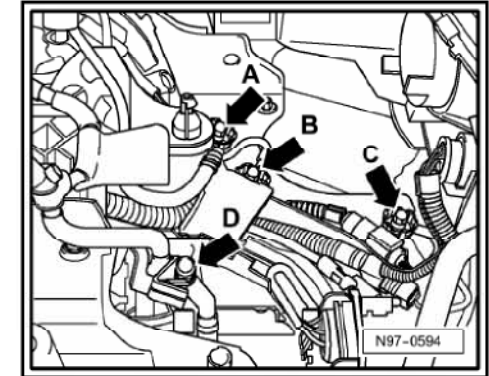


## 1.2 Overview of Ground Connections in interior

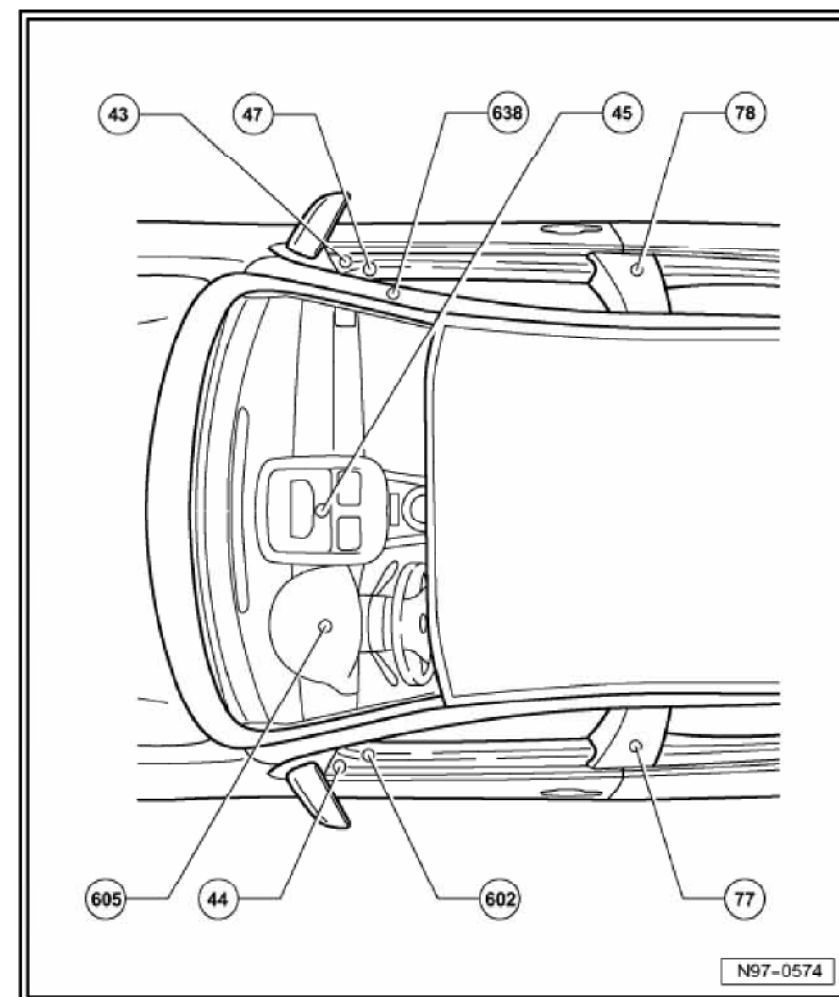

638 - Ground Connection (on right A-pillar) ⇒ -Arrow A-


47 - Ground Connection (in front right footwell), (Not used from model year 2007) ⇒ -Arrow B-

43 - Ground Connection (on right lower A-pillar) ⇒ -Arrow C-

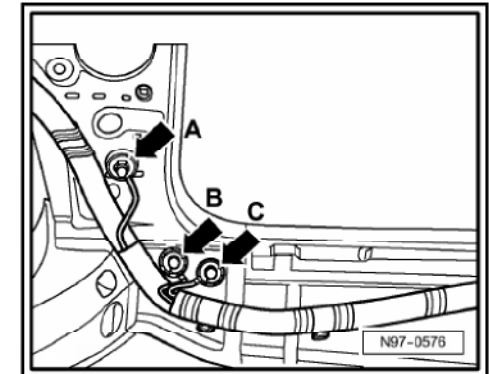


44 - Ground Connection (on left lower A-pillar) ⇒ -Arrow B-


602 - Ground Connection (in front left footwell) ⇒ -Arrow A-

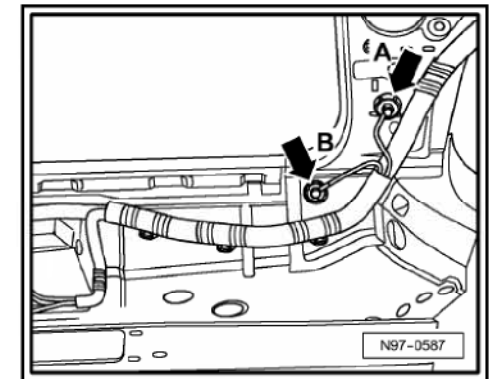


45 - Ground Connection (behind instrument panel, center) ⇒ - Arrow -

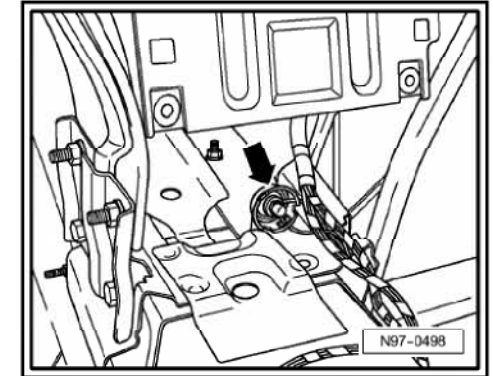


605 - Ground Connection (on upper steering column) ⇒ - Arrow -

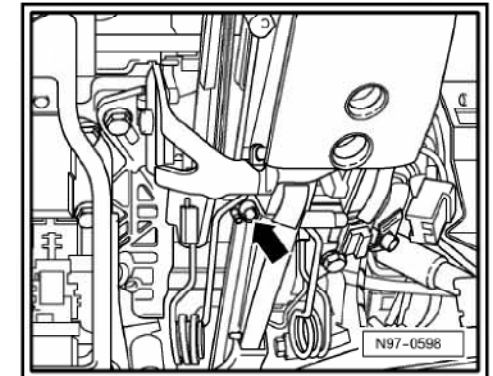

78 - Ground Connection (on right lower B-pillar), (Not used from model year 2007) ⇒ -Arrow-

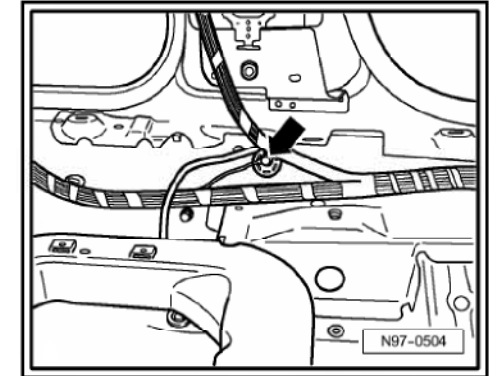


77 - Ground Connection (on left lower B-pillar), (Not used from model year 2007) ⇒ -Arrow-

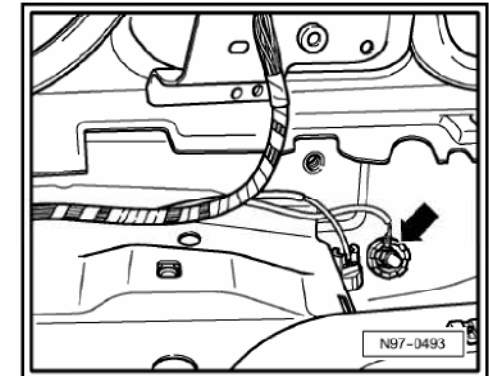





### 1.3 Overview of Ground Connections in luggage compartment

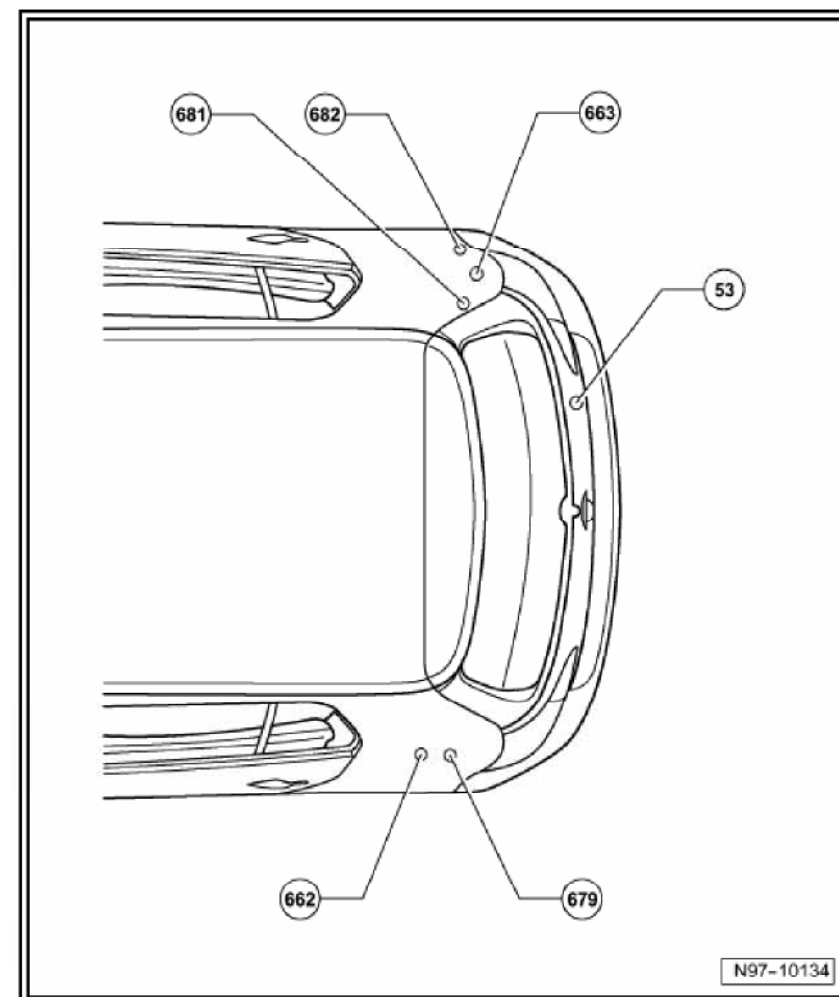

679 - Ground Connection 2 (in left rear side panel) ⇒ -Arrow B-  
 662 - Ground Connection (on left rear C-pillar), (Not used from model year 2007) ⇒ -Arrow A-

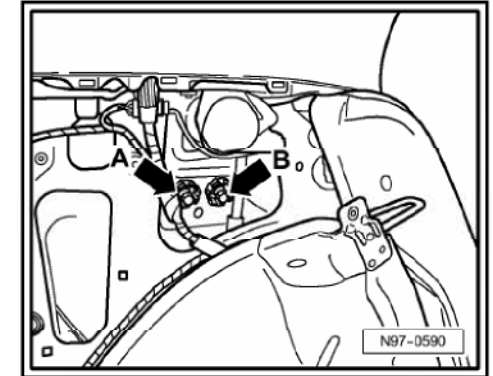

681 - Ground Connection 1 (in right rear side panel) ⇒ -Arrow A-  
 682 - Ground Connection 2 (in right rear side panel) ⇒ -Arrow B-  
 663 - Ground Connection (on right rear C-pillar) ⇒ -Arrow C-

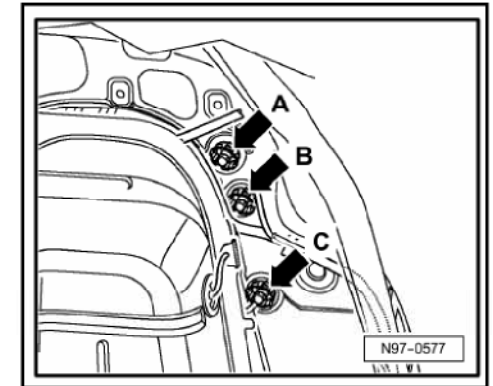

53 - Ground Connection (in rear lid, right) ⇒ -Arrow-

