

To adjust the octane is simple, plug VAG COM into your car, turn the ignition on and start VAG COM on your computer. With in VAG COM select the **'Engine'** control module, then select **'Adaption'**. Now select **Channel 9** and press **'Read'**. The value that is shown is the current octane setting, default is 93(91 for california). Enter your value and press 'Save'

Allowable range is 80 to 112

Software octane number is an approximation due to variance in fuels and seasonal blends, it is designed as an indicator - NOT an absolute. If when having 93 octane in the tank and setting software to 93, high ignition retard is experienced then octane is to be reduced until ignition retard is acceptable. The reverse is also true.

## Setting/Adjusting Launch BOOST

To adjust the launch boost is simple, plug VAG COM into your car, turn the ignition on and start VAG COM on your computer. With in VAG COM select the 'Engine' control module, then select 'Adaption'. Now select Channel 13 and press 'Read'. The value that is shown is the current launch boost setting. To set the boost that you require simply enter your desired PSI and press 'Save'

Allowable range is 0 to 30 which is 0 to 30PSI - Default is 15PSI

The value is the actual boost, ie 15 is 15PSI boost (~2020mb)

## No Lift Shift timer adjustment

To adjust the timer is simple, plug VAG COM into your car, turn the ignition on and start VAG COM on your computer. With in VAG COM select the 'Engine' control module, then select 'Adaption'. Now select Channel 11 and press 'Read'. The value that is shown is the current timer setting. Enter your value and press 'Save'

If the current timer value is too short, simply increase the value If the current timer value is too long, simply decrease the value

The default is 80 which is ~800ms

The above settings can be adjusted while the engine is running and will apply changes live.

## Setting/Adjusting Launch RPM

With the engine running, car stood still and in neutral, raise the RPM of the engine with the throttle. When the RPM reaches your desired value ake with your left foot. The CEL will illuminate as an acknowledgement

Launch RPM is remembered by the ECU at all times, even when the ignition is off. The next time you start the engine, launch RPM will remain the same as previously set.

Current launch RPM can be viewed in VAG COM measure block 199

## Extra info:

Individual wheel speeds are available on block 198

Front left/Front right/Rear Left/Rear Right

