




## HVW-904 HPA Core Interlock Motor Mount Installation Instructions

Applications: All Mk5/6 Platform  
(Mk5 Golf, Jetta, R32, Gen 2 Audi TT/A3, etc.)

### Tools needed:

- Jack
- Jack stands
- Socket Wrench
- 21mm socket
- Sharp knife or utility scissors
- Channel lock pliers
- Dish soap

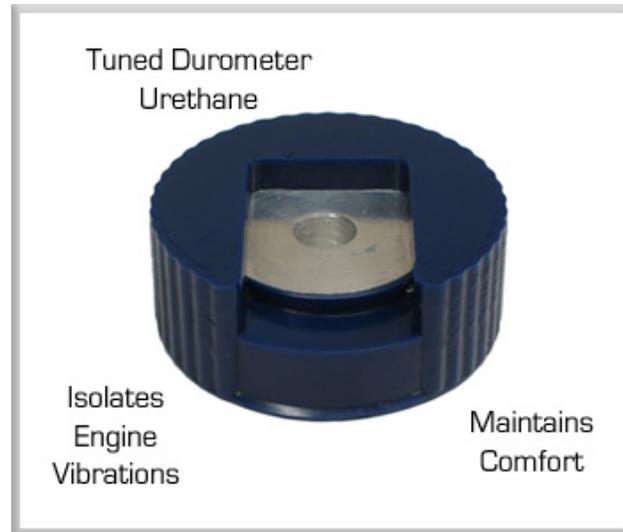

### 1) Raise and **\*\*secure vehicle with jack stands\*\***

2. Remove 22mm bolt that secures OE Mount



3. Use sharp knife or utility scissors to cut away rubber portion of lower OE Mount



4. Remove center section of lower OE mount



5. Remove plastic outer ring of lower OE mount with channel lock pliers



6. Use dish soap to lubricate core interlock mount and install in to sub frame making sure the recess in the mount matches up with the corresponding existing pendulum rod



6. Secure core interlock mount with OE bolt. Torque to 50nm plus an additional ¼ turn



## HPA Motorsports Inc.

7561 134A Street, Surrey BC Canada V3W 7B3

P: 604-598-8520 F: 604-598-8760

[www.hpamotorsport.com](http://www.hpamotorsport.com) [info@hpamotorsport.com](mailto:info@hpamotorsport.com)